



Remote configuration of Lun-25 via the site lun.ortus.io

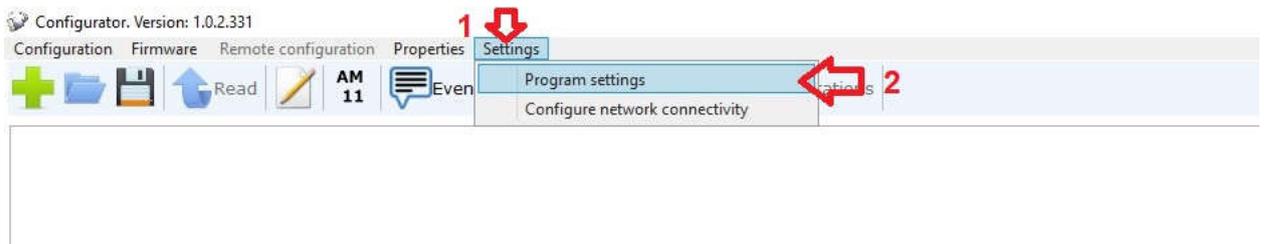


The configuration cable is not needed. Start Configurator-11.


1. Click on "Settings"
2. In the drop-down menu, select "Program setting"

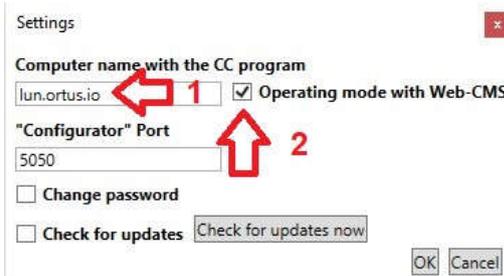


1. Enter web site address - lun.ortus.io
2. Set the option to activate the mode of work with the site and click "ok"

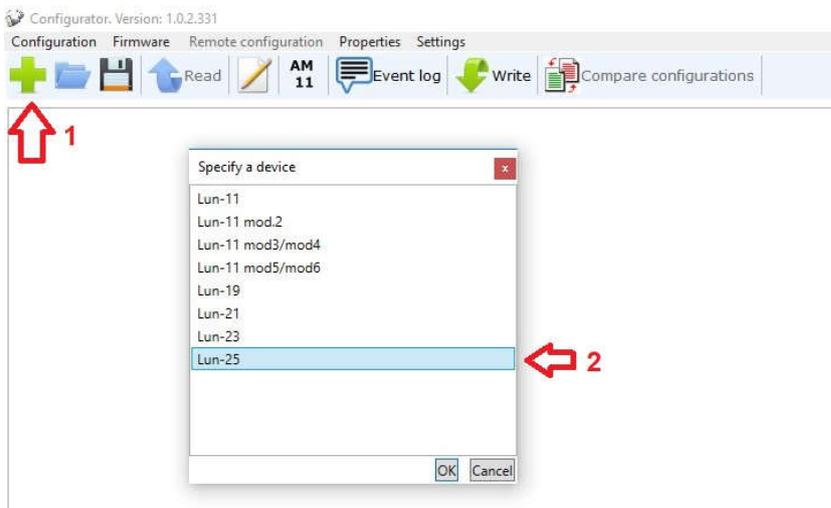


1. Press the button to select the device
2. In the drop-down list, select Lun-25 and press "ok".

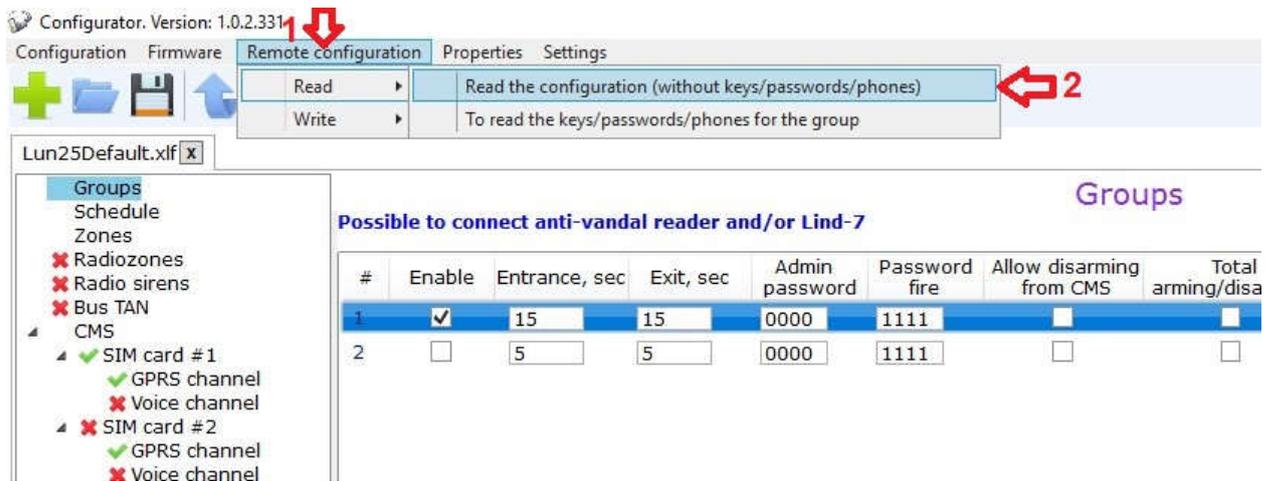


1. Click on "Remote configuration"
2. In the drop-down menu, select "Read the configuration"

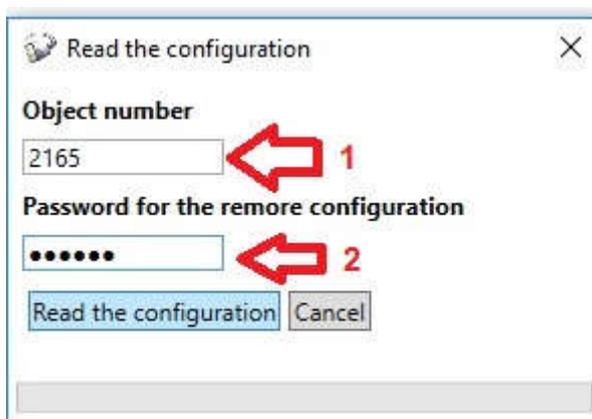

1. Enter the Panel ID which is assigned to your object, see the figure below.

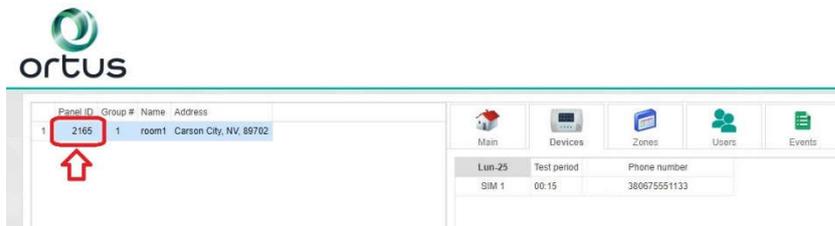

1. Enter the remote configuration password - **jcpas** and click "Read the configuration"

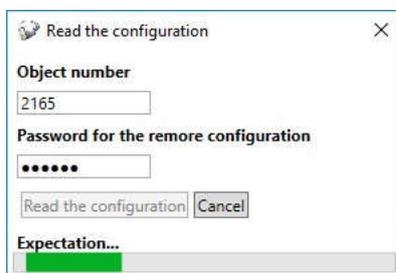

Wait until the download is complete.